


CAL. YM24

ALARM with SMALL SECOND

1 / 5 Instructions

Features

- ◆ Hour, Minute and Small second hands
- ◆ Date
- ◆ Alarm : Single time alarm
 - Can be set to ring only once at a designated time within the coming 12 hours.

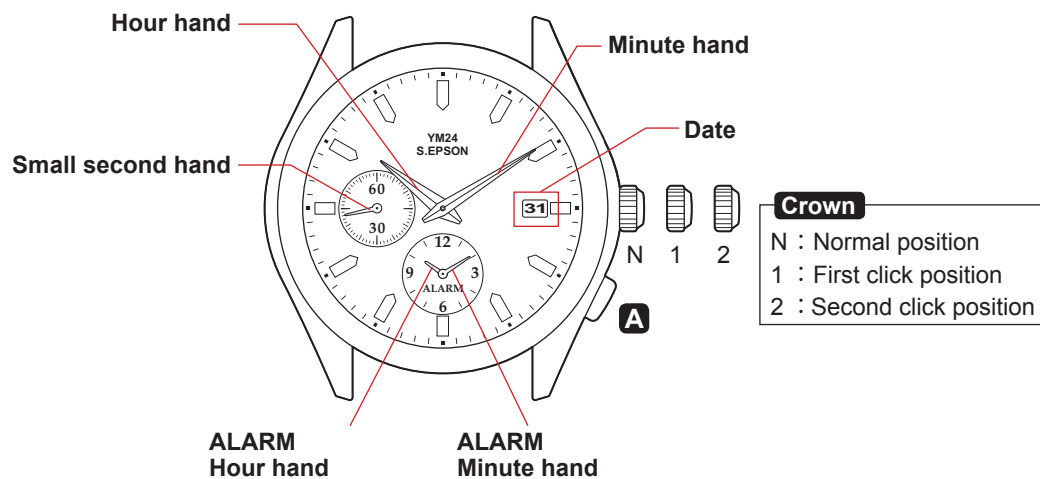

Movement Size	12 ^{'''}
Outside Diameter	27.60 mm (12H-6H) x 24.00 mm (3H-9H)
Casing Diameter	27.00 mm (12H-6H)
Height	3.70 mm (Include battery)
Battery	SR927SW
Battery Life Approx.	5 years

◆ Battery Life Indicator

When the battery nears its end, the small second hand moves at two-second intervals instead of normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

Note: While the small second hand is moving at two-second intervals, the alarm will not ring even if it is engaged.

This is not a malfunction.

The watch remains accurate while the small second hand is moving at two-second intervals.



S.EPSON Products


JAPAN TECHNOLOGY & QUALITY

www.timemodule.com


CAL. YM24

ALARM with SMALL SECOND

How to Set Time and Date:

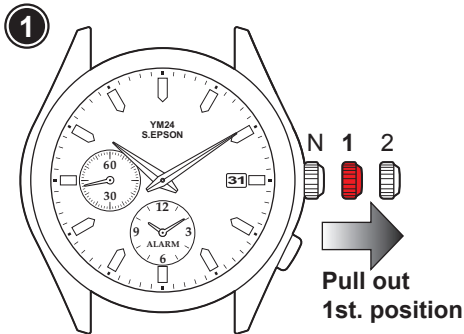


- Pull crown out to 1st. click position.

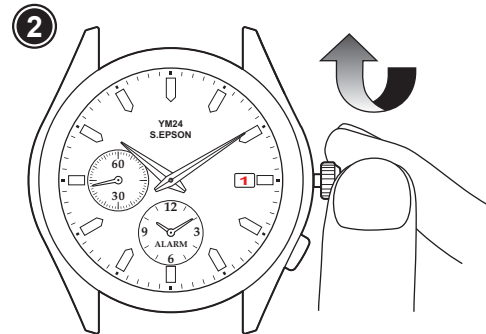


- Turn the crown clockwise until the previous day's date appears.

*Note: Do not set the date between 9:00 PM and 1:00 AM.
Otherwise, the date may not change properly.*

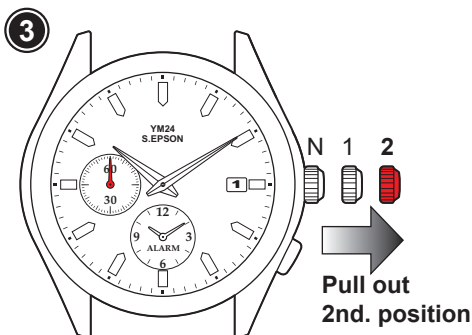


- Pull crown out to the 2nd. click position when the Second hand is at the 12 o'clock position.

Note: If the alarm has been set and the crown is pulled out to the 2nd. click position, the Alarm hands will turn to indicate the current time.

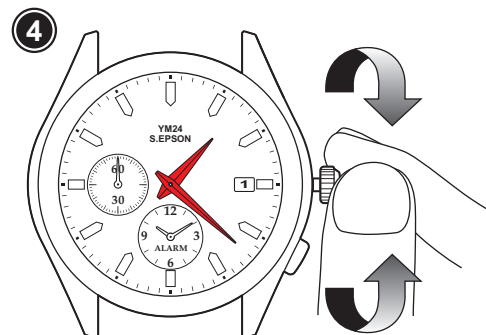

- Turn to set the Hour and Minute hands.
- Turn clockwise to advance the Hour and Minute hands past 12:00 AM. Doing so will advance the date to the current date.
- Set the Hour and Minute hands to the desired time taking AM or PM into consideration.

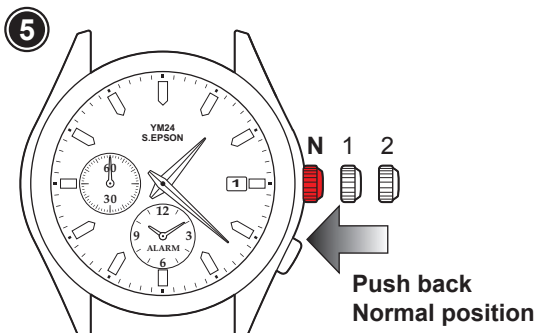

- Push crown back to normal position.

Recommend:

- The hands be set to the time a few minutes ahead of the current time, taking into consideration the time required to set the Alarm hands and to adjust the position if necessary.
- When setting the Minute hand, first advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute.



S.EPSON Products


JAPAN TECHNOLOGY & QUALITY

www.timemodule.com


How to Set Alarm:

Before using the alarm, check that the Alarm hands are adjusted to the current time.

- The alarm can be set to ring only once at a designated time within the coming 12 hours.
- The alarm time can be set in one minute increments.

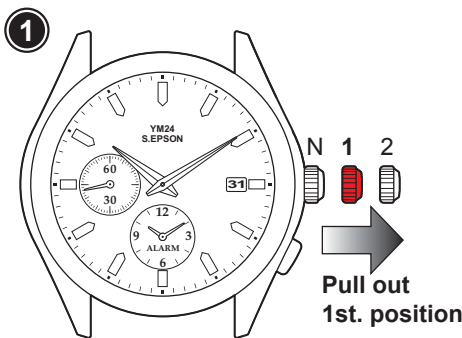


- Pull the crown out to 1st. click position.

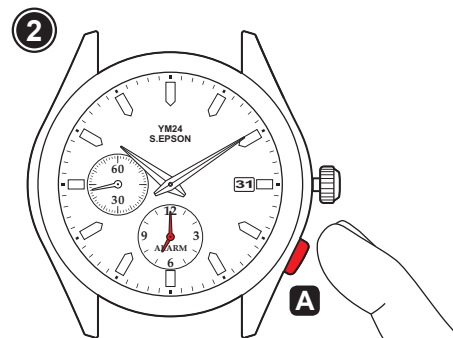

- Press button "A" repeatedly to set the Alarm hands to the desired alarm time.

Note: The Alarm hands move quickly if button "A" is kept pressed.

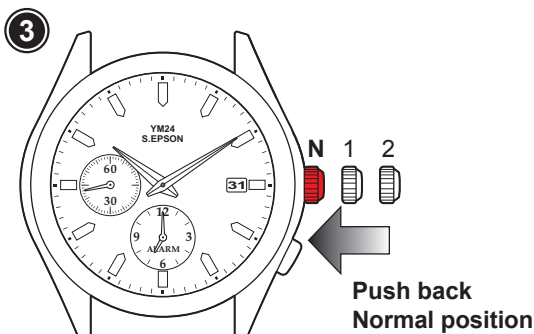

- Push crown back to normal position.

Note: The alarm is automatically engaged.

- The single-time alarm cannot be set for a time more than 12 hours ahead of the current time. While you keep button "A" pressed to advance the Alarm hands quickly, they stop when they indicate the current time and the alarm is disengaged. In that case, release button "A", and then, press and hold the button again to set the Alarm hands to the desired time.
- While the crown is at the normal position, the Alarm hands indicate the current time when the alarm is disengaged and the designated alarm time when it is engaged.

Note: If the Alarm hands are not adjusted to the current time, follow the procedure in "Alarm Hand Position Adjustment".



CAL. YM24


ALARM with SMALL SECOND

How to Stop the Alarm:


At the designated time the alarm rings for 20 second, and it is automatically disengaged as it stops. To stop it manually, press button "A".

- While the alarm is ringing, pressing button "A" will only stop the alarm.

How to Cancel the Alarm Time You Have Set:

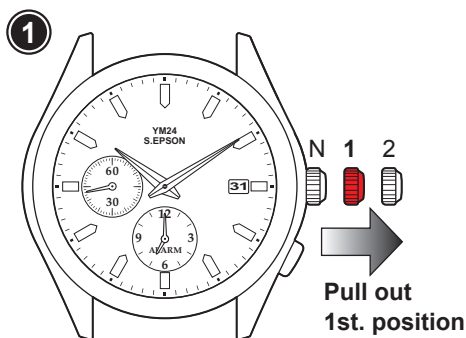


- Pull the crown out to 1st. click position.

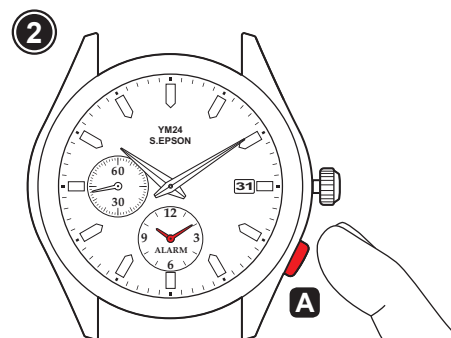

- Press and hold button "A" until Alarm hands stop and indicate the current time.

Note: The Alarm hands move quickly if button "A" is kept pressed.

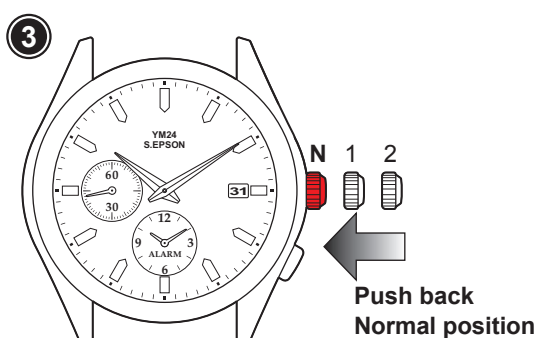

- Push crown back to normal position.



S.EPSON Products

JAPAN TECHNOLOGY & QUALITY

www.timemodule.com

CAL. YM24


ALARM with SMALL SECOND

5/5
Instructions

Alarm Hand Position Adjustment:


Set the Alarm hands to the time the main time hands indicate.

Before using the alarm, check that the Alarm hands are adjusted.

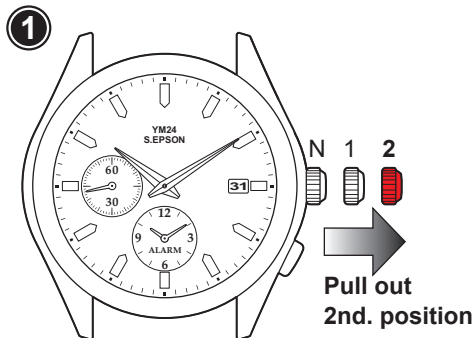


- Pull crown out to the 2nd. click position when the Second hand is at the 12 o'clock position.

Note: If the alarm has been set and the crown is pulled out to the 2nd. click position, the Alarm hands will turn to indicate the current time.

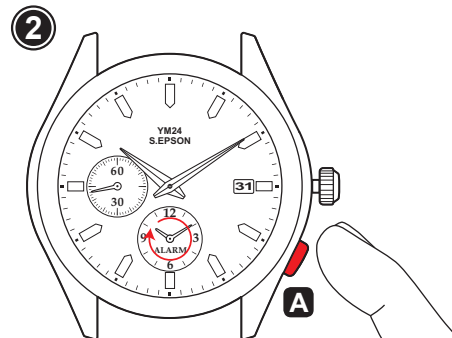

- Press button "A" repeatedly to set Alarm hands to the time the main time hands indicate.

Note: The Alarm hands move quickly if button "A" is kept pressed.

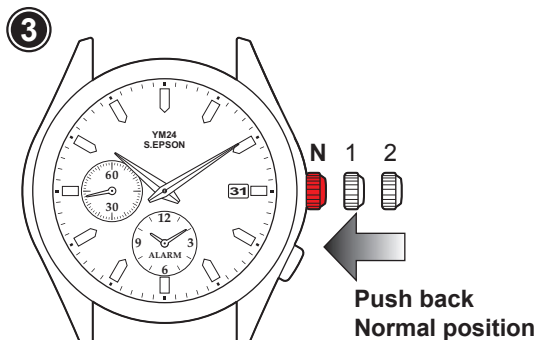

- Push crown back to normal position.



S.EPSON Products

JAPAN TECHNOLOGY & QUALITY

www.timemodule.com