

※Please contact us when you order these parts. ※订购零件时请与我们联系

| PARTS NAME 零件名称 | | PARTS CODE 零件编号 | |
|--|---------------|-----------------|-----------|
| | | Type - L | Type - LL |
| Train wheel bridge | 轮列夹板 | 0125 318 | |
| Center wheel and pinion bridge | 中心轮夹板 | 4283 042 | |
| Center wheel and pinion | 中心轮 | 0221 091 | ※ |
| Third wheel and pinion | 3# 轮 | 0231 059 | |
| Fourth wheel and pinion | 4# 轮 | 0144 002 | |
| Fifth wheel and pinion | 5# 轮 | 0701 015 | |
| Step rotor | 磁石轮 | 4146 063 | |
| Hour wheel | 时轮 | 0273 041 | ※ |
| Minute wheel and pinion | 度数轮 | 0261 126 | |
| Setting wheel | 小铁车 | 0281 452 | |
| Clutch wheel | 离合轮 | 0282 452 | |
| Setting lever | 设置杆 (压制) | 0383 891 | |
| Yoke | 离合杆 (横担) | 0384 024 | |
| Reset lever | 止秒弹弓 | 4455 006 | |
| Train wheel setting lever | 规正弹弓 | 0391 028 | |
| Stator (A) | 定子板 (A) | 4239 063 | |
| Stator (B) | 定子板 (B) | 4239 064 | |
| Circuit block | 回路板 | 4004 353 | |
| Circuit block spacer | 回路板垫片 | 4408 149 | |
| Coil block (A) | 线圈 (A) | 4002 054 | |
| Coil block (B) | 线圈 (B) | 4002 055 | |
| Battery connection (-) | 负极片 (-) | 4270 336 | |
| Seconds counter intermediate wheel and pinion | 计秒中间轮 | 0885 003 | |
| Seconds counting wheel | 计秒轮 | 0888 027 | ※ |
| Counter intermediate wheel and pinion | 计时中间轮 | 0886 004 | |
| Minute counter intermediate wheel and pinion (A) | 计分中间轮和轴 (A) | 0886 005 | |
| Minute counter intermediate wheel (B) | 计分中间轮和轴 (B) | 0886 006 | |
| Minute counter intermediate wheel (C) | 计分中间轮和轴 (C) | 0886 007 | |
| Minute counting wheel | 计分轮 | 0902 017 | ※ |
| Positioning arbor | 定位柱 | 0685 003 | |
| Lower plate for chronograph bridge | 计时轮列夹板 | 0186 002 | |
| Chronograph bridge | 计时码表夹板 | 0190 007 | |
| Seconds counting wheel friction spring | 秒计压片 | 0353 018 | |
| Hammer | 三叉锤 | 0585 013 | |
| Chronograph coupling lever | 计时码表连接杆 | 0581 007 | |
| Hammer operating lever (A) | 三叉锤操作杆 (A) | 0587 004 | |
| Hammer operating lever (B) | 三叉锤操作杆 (B) | 0587 006 | |
| Switch lever (A) | 按制杆 (A) | 4450 017 | |
| Switch lever (B) | 按制杆 (B) | 4450 018 | |
| Train wheel stop lever | 规正弹弓 | 0894 002 | |
| Date indicator maintaining plate | 日曆定位片 (日曆盘压片) | 0808 052 | |
| Date jumper | 日曆定位弹弓 | 0810 019 | |
| Date corrector setting transmission wheel (A) | 企轮 (A) | 0962 032 | |
| Date corrector setting transmission wheel (B) | 企轮 (B) | 0962 013 | |
| Date corrector setting transmission wheel (C) | 企轮 (C) | 0962 891 | |
| Date corrector wheel | 日曆修正轮 | 0806 002 | |
| Small hour hand wheel | 小时针轮 | 0157 012 | ※ |
| Intermediate small hour hand wheel and pinion | 小时针中间轮 | 0817 048 | |

※Please contact us when you order these parts. ※订购零件时请与我们联系

| PARTS NAME 零件名称 | | PARTS CODE 零件编号 | |
|--|----------|-----------------|-----------|
| | | Type - L | Type - LL |
| Switch lever holder | 按制杆压片 | 0837 005 | |
| Switch spring | 按制弹弓 | 4250 080 | ※ |
| Switch spring screw | 按制弹弓螺丝 | 0016 121 | |
| Lower plate for chronograph bridge screw | 计时轮列夹板螺丝 | 0016 121 | |
| Date indicator maintaining plate screw | 日历定位片螺丝 | 0012 354 | |
| Coil block screw | 线圈组螺丝 | 0012 354 | |
| Switch lever holder screw | 按制杆压片螺丝 | 0012 354 | |
| Winding Stem | 巴芯 | 0351 177 | |