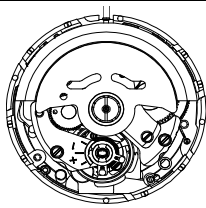
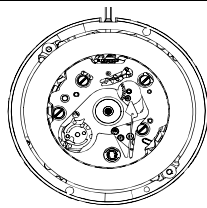



**TECHNICAL GUIDE
&
PARTS CATALOGUE**

**Cal.NH3 Series
(NH34A/35A/36A/37A/38A/39A)**


AUTOMATIC MECHANICAL

Item		Cal. No.	NH35A					
Movement		<div></div> <p>*Refer to page 2 for other Cal. No. specifications.</p>						
Movement size		Outside diameter	Φ27.40 mm					
		Casing diameter	Φ29.36 mm (with dial holding spacer)					
		Total height	5.32 mm					
Cal. No.			NH34A	NH35A	NH36A	NH37A	NH38A	NH39A
Time indication	3 Hands (hour, minute, second)		○	○	○	○	○	○
	Date calendar		○	○	○	○	-	-
	Day calendar		-	-	○	-	-	-
	24 hour hand		○	-	-	○	-	○
Basic function	Manual winding		○	○	○	○	○	○
	Automatic winding with ball bearing		○	○	○	○	○	○
	Stop-second device		○	○	○	○	○	○
	Quick date correction		○	○	-	○	-	-
	Quick day-date correction		-	-	○	-	-	-
	Second time zone setting		○	-	-	-	-	-
Frequency			21,600 vibrations per hour					
Accuracy	Static accuracy		- 20 ~ + 40 seconds per day * Measurement should be done within 10 ~ 60 minutes after fully wound up. * All measurements are made without the calendar in function.					
	Measurement position		Direction of 3 positions. (1) Dial up (2) 9 o'clock up (3) 6 o'clock up					
	Lift angle		53 deg.					
	Measurement time		20 seconds * Equipment to be used : Witschi WATCH EXPERT					
	Posture difference		Difference is under 60 seconds within maximum value and minimum value. * Measurement should be done within 10 ~ 60 minutes after fully wound up. * Direction of 4 positions. (1) 12 o'clock up (2) 9 o'clock up (3) 6 o'clock up (4) 3 o'clock up					
	Isochronisms (24h-0h)		- 20 ~ + 40 seconds per day. * Direction of position : Dial up * Difference of static accuracy of 24 h and 0 h					
Duration time			More than 41 hours (Mainspring after fully wound up) * Posture to confirmation : Dial up					
Winding the mainspring			<< Movements >> ▪Fully wound up by turning the crown minimum 55 times. ▪Fully wound up by turning the ratchet wheel screw 8 times. << Complete Watch >> A winding machine is needed to wind up the mainspring. * Full wind up conditions (Reference information) (1) Rotary speed : 30 rpm (2) Operating time : 60 minutes					
Crown position	Normal position	Counterclockwise	Free	Free	Free	Free	Free	Free
		Clockwise	Manual winding	Manual winding	Manual winding	Manual winding	Manual winding	Manual winding
	First click	Counterclockwise	Date setting	Date setting	Date setting	Date setting	Time setting	Time setting
		Clockwise	Second time zone setting	Free	Day setting	Free		
	Second click			Time setting	Time setting	Time setting	Time setting	-


NH34A

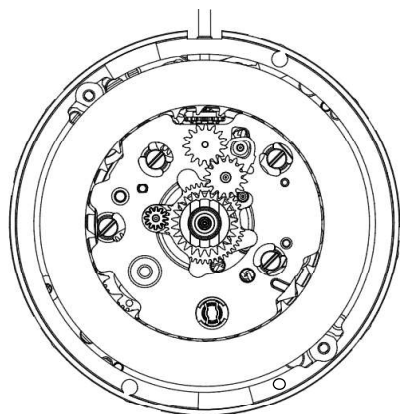


NH35A

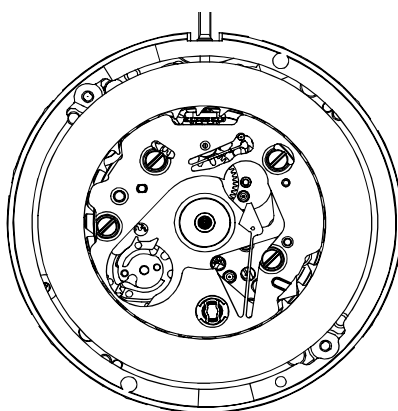


NH36A

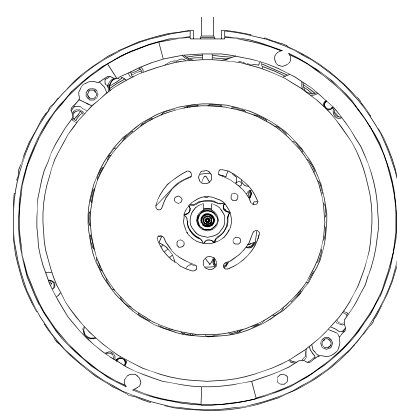


NH37A

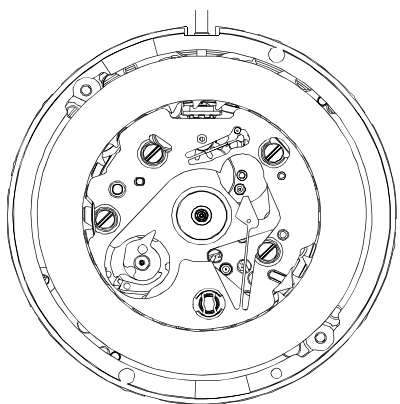

NH38A

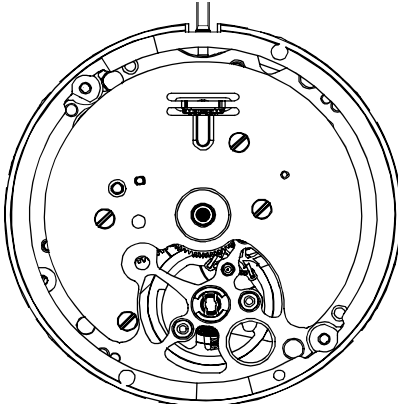

NH39A

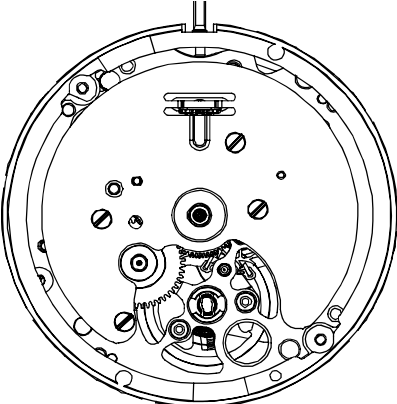

Disassembling procedures Figs.


① → ⑤⑧


Reassembling procedures Figs.

⑤⑧ → ①

Type of oil
 Moebius 9010

 A9a (S-4)

 A9a (S-6)

Oil quantity mark
 Normal quantity

 Sufficient quantity



<<NH34A>>

② 0012 354

Date indicator maintaining plate screw

 ① 0491 333
Dial Washer

***2**
setting direction

OK	NG
	

② 0012 354


Date indicator maintaining plate screw

③ 0808 334

 Date indicator maintaining plate
with time difference setting lever


④ 0278 333

24 hour wheel

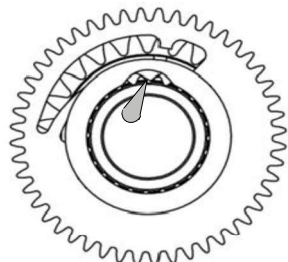***1**
24 hour wheel (back side)


⑤ *Date dial

 ⑥ 0810 333
Date jumper

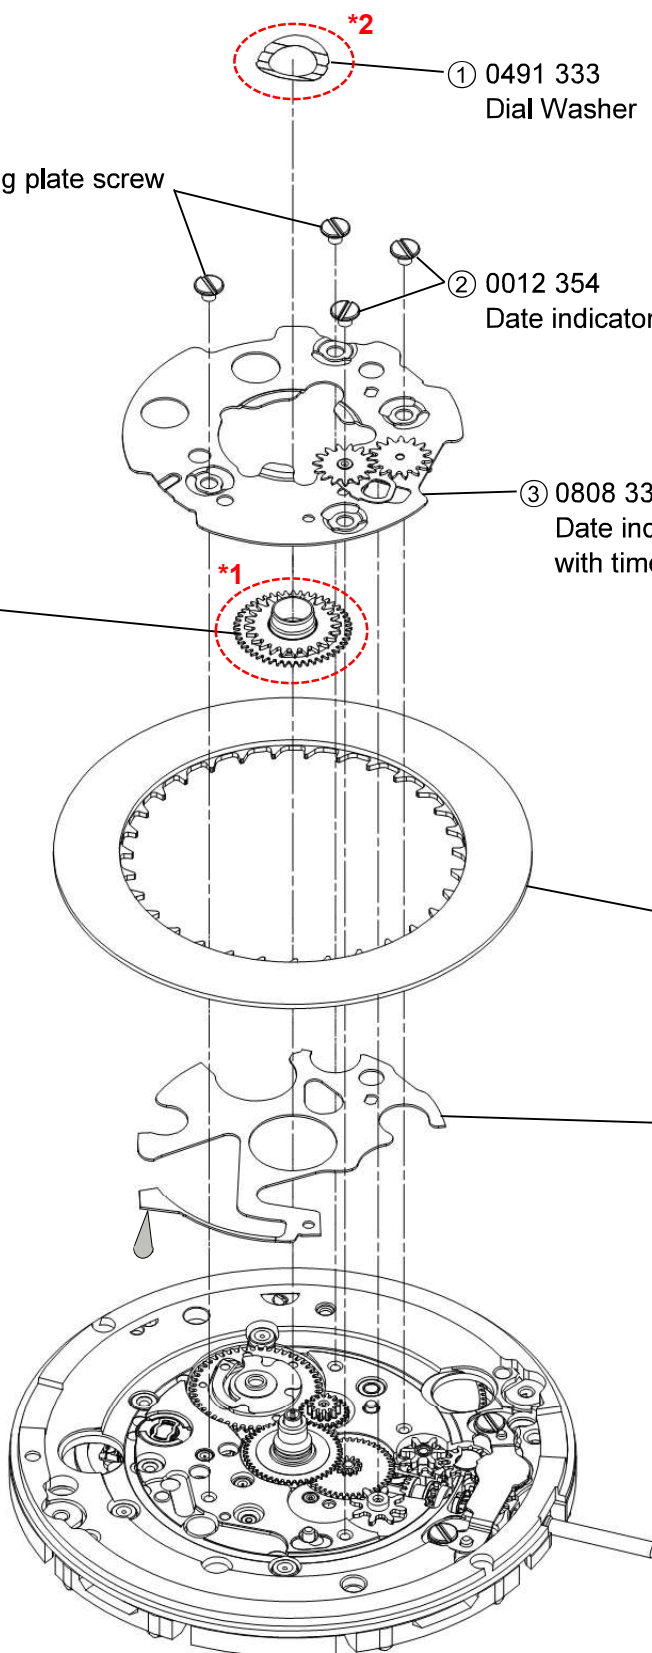***Refer to page 11 for
each parts code**




Disassembling procedures Figs.


① → 58

Reassembling procedures Figs.

58 → ①

Type of oil

-  Moebius 9010
-  A9a (S-4)


 A9a (S-6)

Oil quantity mark

 Normal quantity

 Sufficient quantity

<<NH34A>>

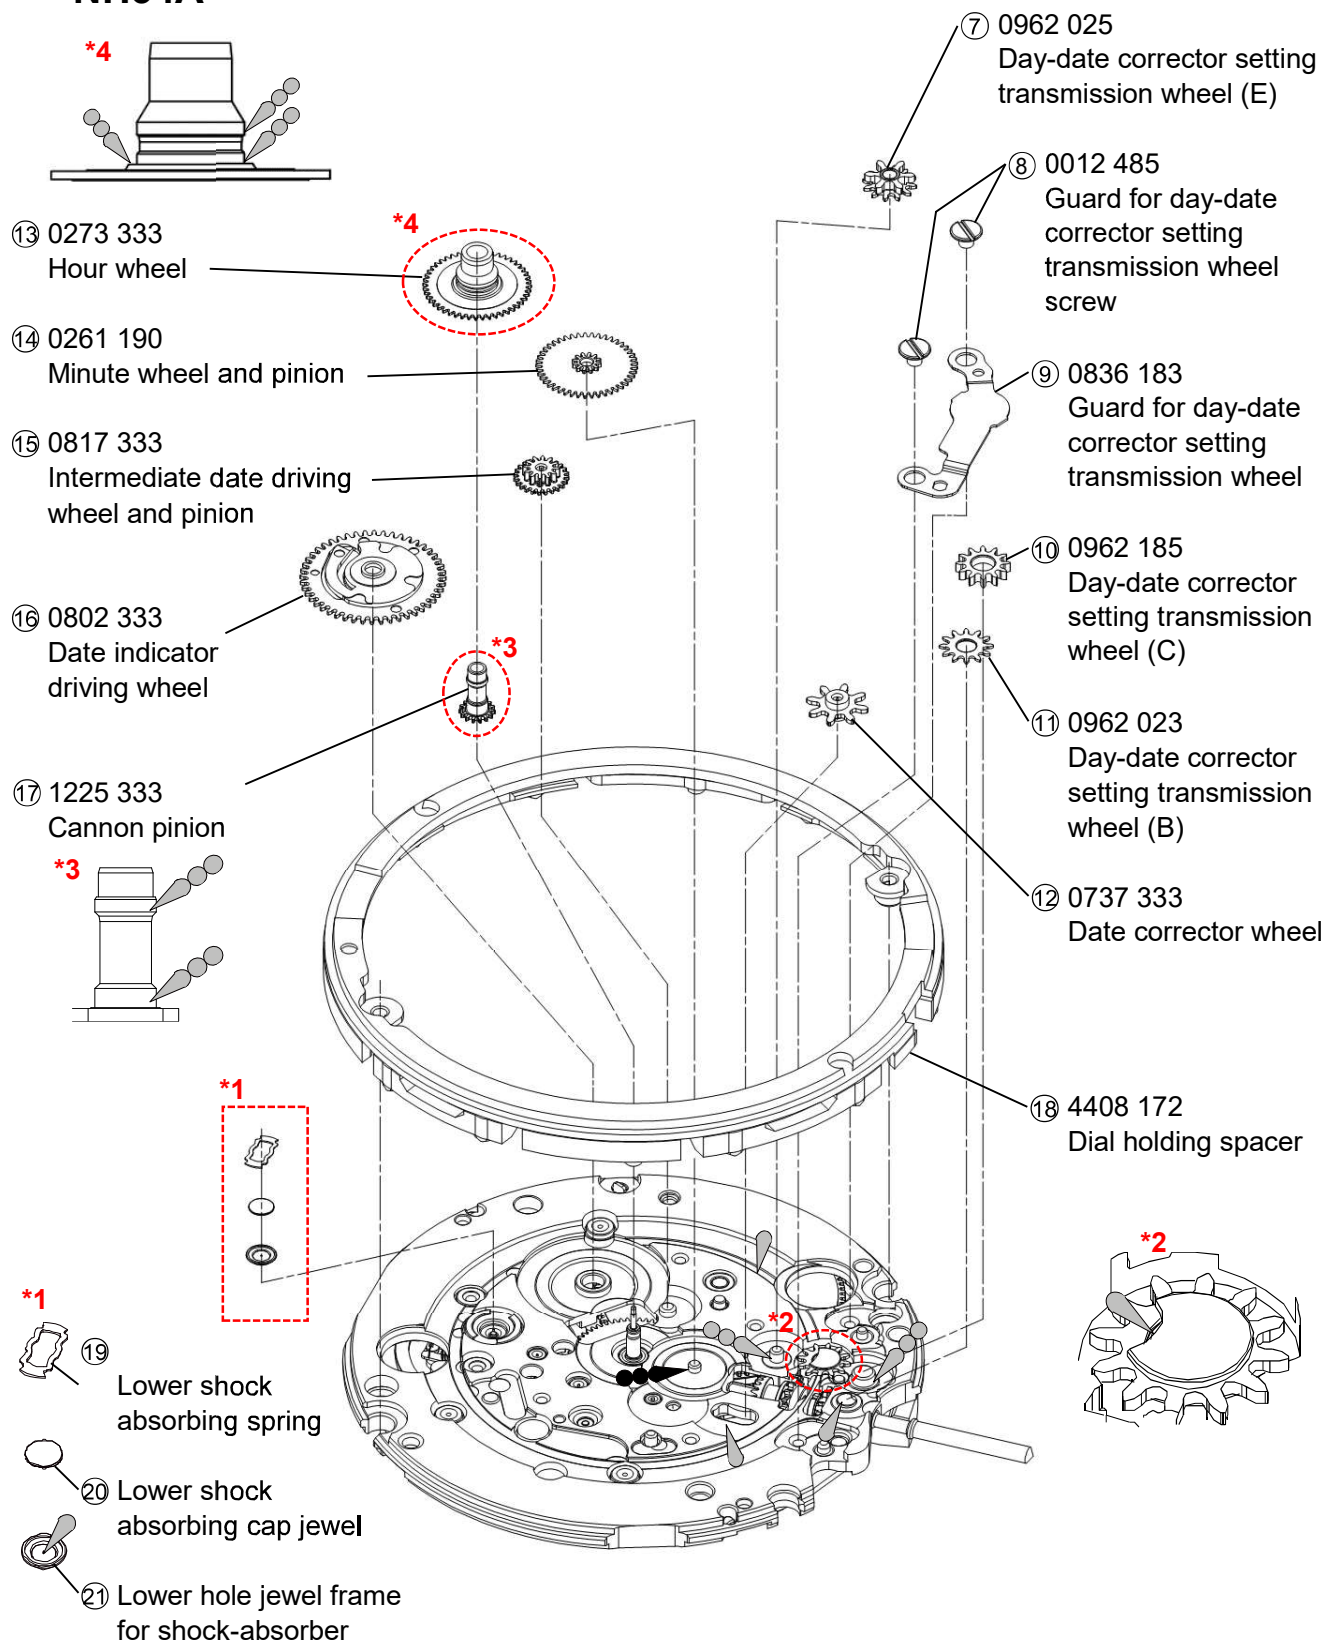




Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①


Type of oil
 Moebius 9010
 A9a (S-4)

 A9a (S-6)

Oil quantity mark
 Normal quantity

 Sufficient quantity

<<NH35A/36A/37A>>

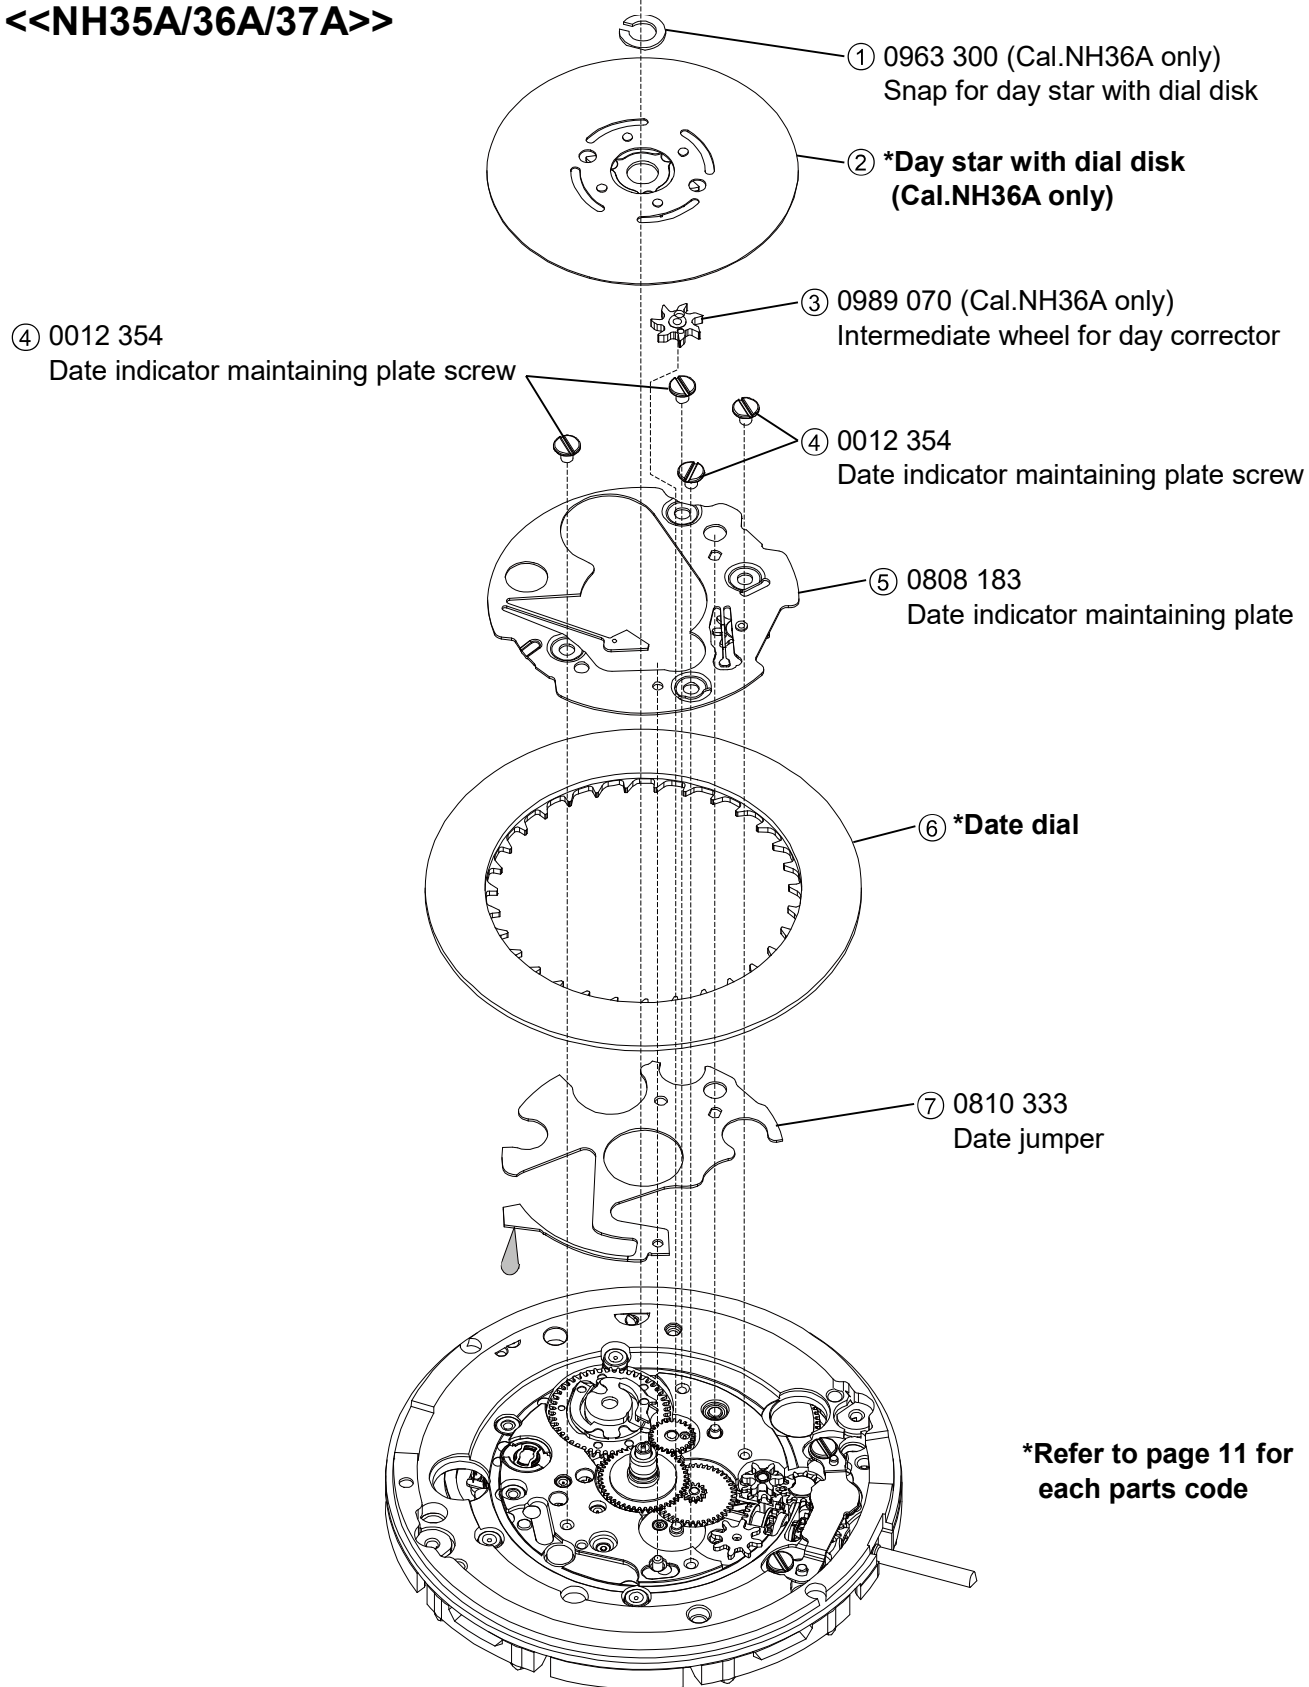



***Refer to page 11 for
each parts code**


Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①

Type of oil
 Moebius 9010
 A9a (S-4)

 A9a (S-6)

Oil quantity mark
 Normal quantity

 Sufficient quantity

<<NH35A/36A/37A>>

⑭ Hour wheel

Refer to page 12 for each parts code

⑮ 0261 190

Minute wheel and pinion


 ⑯ Refer to page 12 for
each parts code

 ⑰ Refer to page 12 for
each parts code


⑱ Cannon pinion

 Refer to page 11 for
each parts code

*3

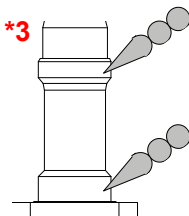

*1



*1


 ⑳ Lower shock
absorbing spring

 ㉑ Lower shock
absorbing cap jewel

 ㉒ Lower hole jewel frame
for shock-absorber

⑧ 0962 025

 Day-date corrector setting
transmission wheel (E)

⑨ 0012 485

 Guard for day-date
corrector setting
transmission wheel
screw

⑩ 0836 183

 Guard for day-date
corrector setting
transmission wheel

⑪ 0962 185

 Day-date corrector
setting transmission
wheel (C)

⑫ 0962 023

 Day-date corrector
setting transmission
wheel (B)


⑬ 0737 183

 Day-date corrector
wheel

⑲ 4408 172

Dial holding spacer

*2


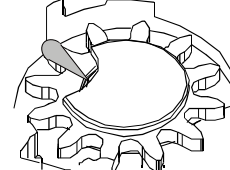



Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①


Type of oil
 Moebius 9010
 A9a (S-4)

 A9a (S-6)

Oil quantity mark
 Normal quantity

 Sufficient quantity

<<NH38A/39A>>

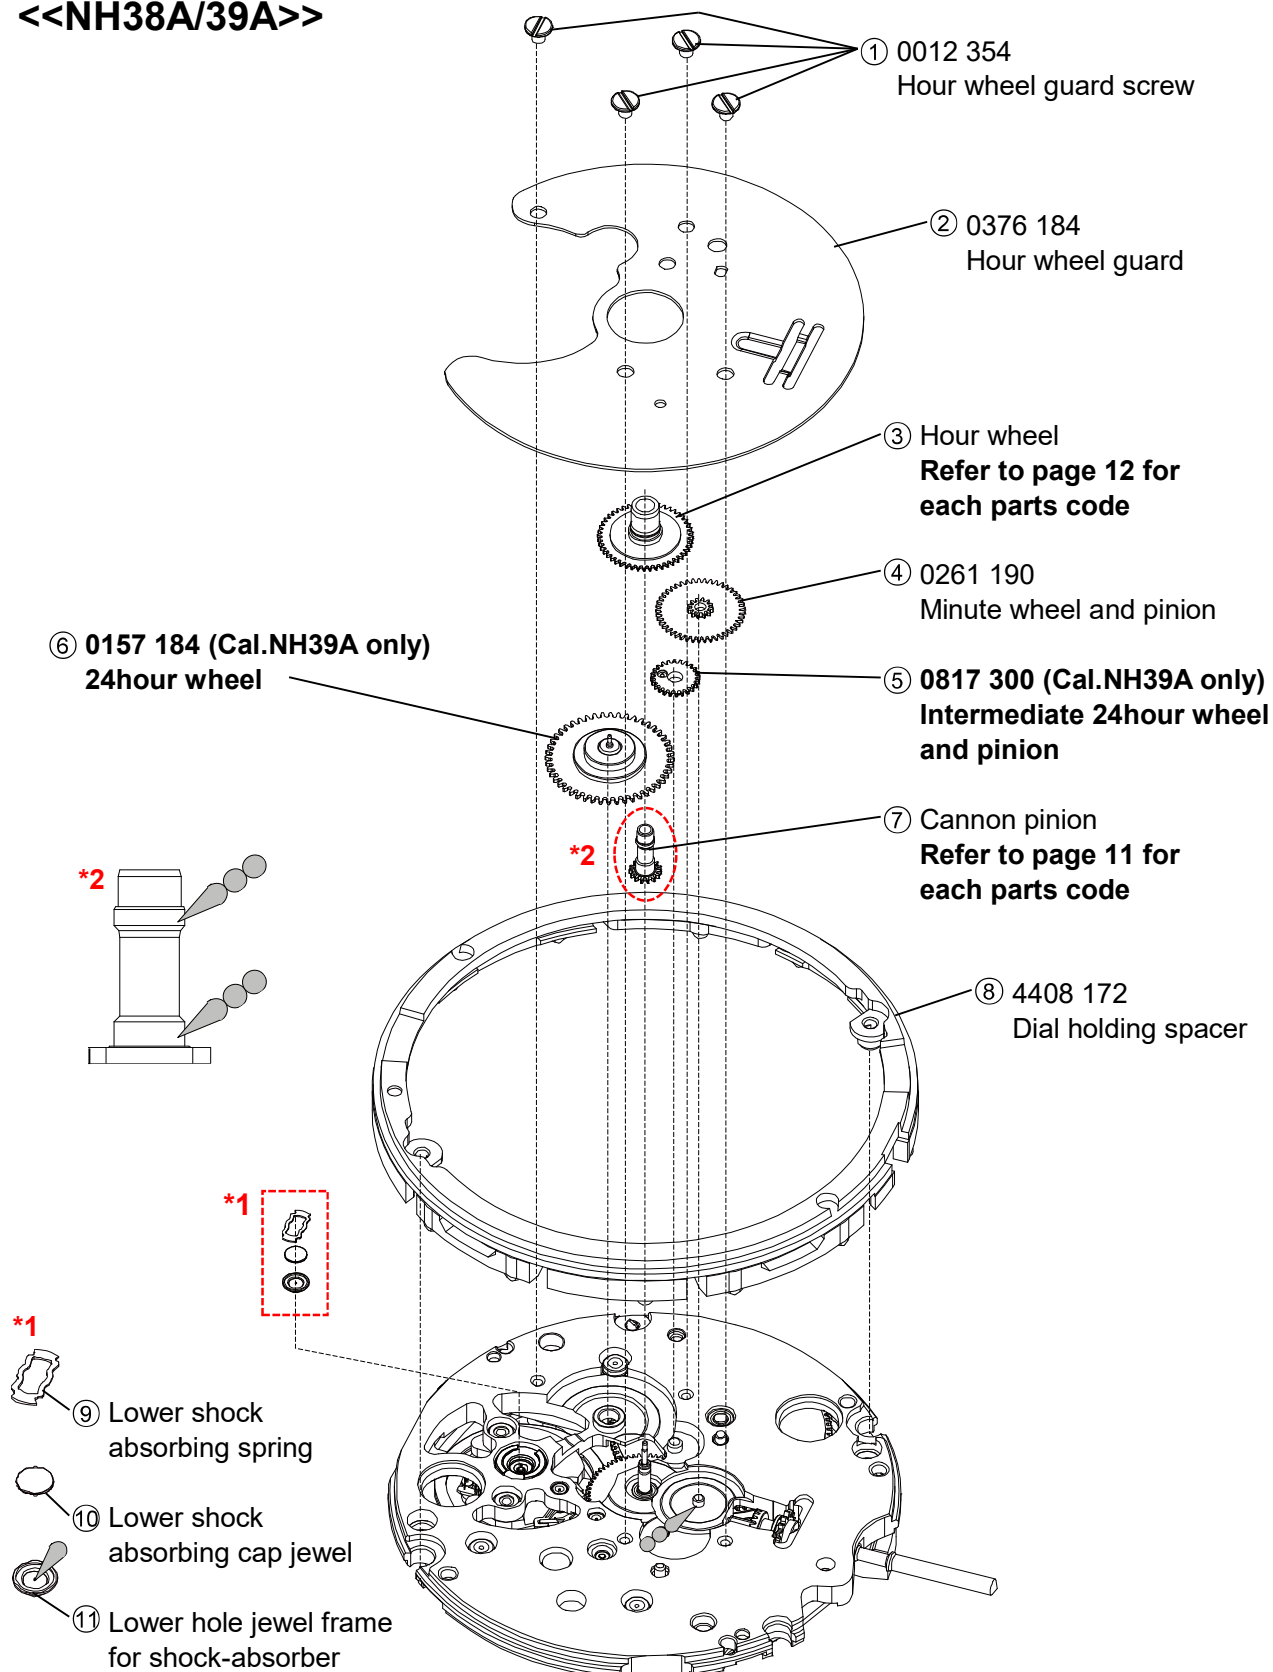



Disassembling procedures Figs.

① → 58

Reassembling procedures Figs.

58 → ①

Type of oil

 Moebius 9010
 A9a (S-4)

 A9a (S-6)

Oil quantity mark

 Normal quantity

 Sufficient quantity

23 Oscillating weight with ball bearing
Refer to page 11 for each parts code

29 0012 100
 Balance bridge screw

30 0173 353
 Balance bridge



30-2
 Upper shock
 absorbing spring

30-3
 Upper shock
 absorbing cap
 jewel

30-4
 Upper hole jewel frame
 for shock-absorber

30-1
 Balance complete
 with stud
**Refer to page
 11 for each
 parts code**

31 0012 354
 Pallet bridge screw

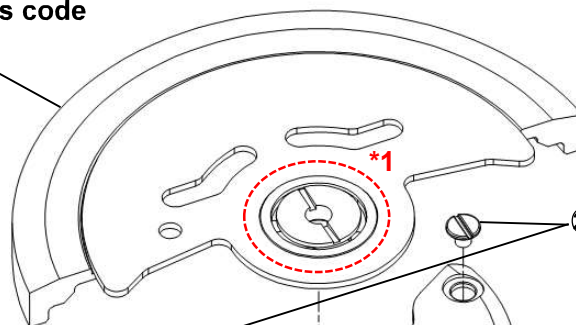

24 0012 354
 Automatic train bridge
 screw

25 0191 183
 Automatic train bridge




26 0514 183
 Second reduction wheel
 and pinion

27 0012 919
 Ratchet wheel screw

28 0285 051
 Ratchet wheel

32 0161 300
 Pallet bridge

33 0301 383
 Pallet fork

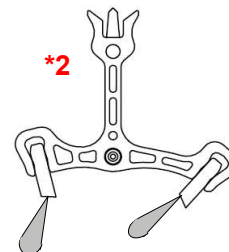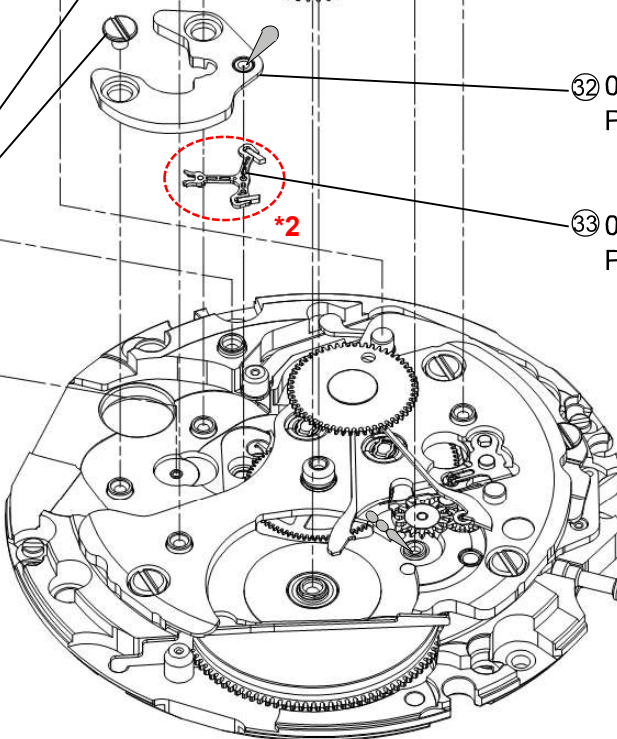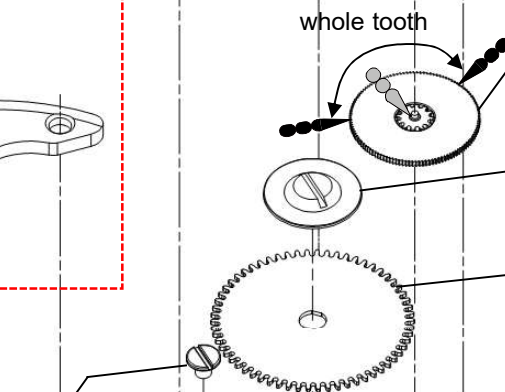

Disassembling procedures Figs.

① → 58

Reassembling procedures Figs.

58 → ①

Type of oil

Moebius 9010
A9a (S-4)

A9a (S-6)

Oil quantity mark

Normal quantity

Sufficient quantity

39 0511 010

First reduction wheel

Refer to page 13 for oiling spot

38 0831 183

Pawl lever

37 0836 002

Reduction wheel holder

42 Fourth wheel and pinion

Refer to page 11 for each parts code

34 0012 100

Barrel and train wheel bridge screw

35-1 Cap jewelled spring

35-2 Cap jewel

36 0363 184
Ratchet sliding wheel spring

35 0114 283

Barrel and train wheel bridge with hole jewel frame

Refer to page 13 for oiling spot

40 0436 166

Lower plate for barrel and train wheel bridge

41 0012 354

Lower plate for barrel and train wheel bridge screw

43 0231 070



Third wheel and pinion

44 0381 004

Click

45 0201 083

Barrel complete with main spring

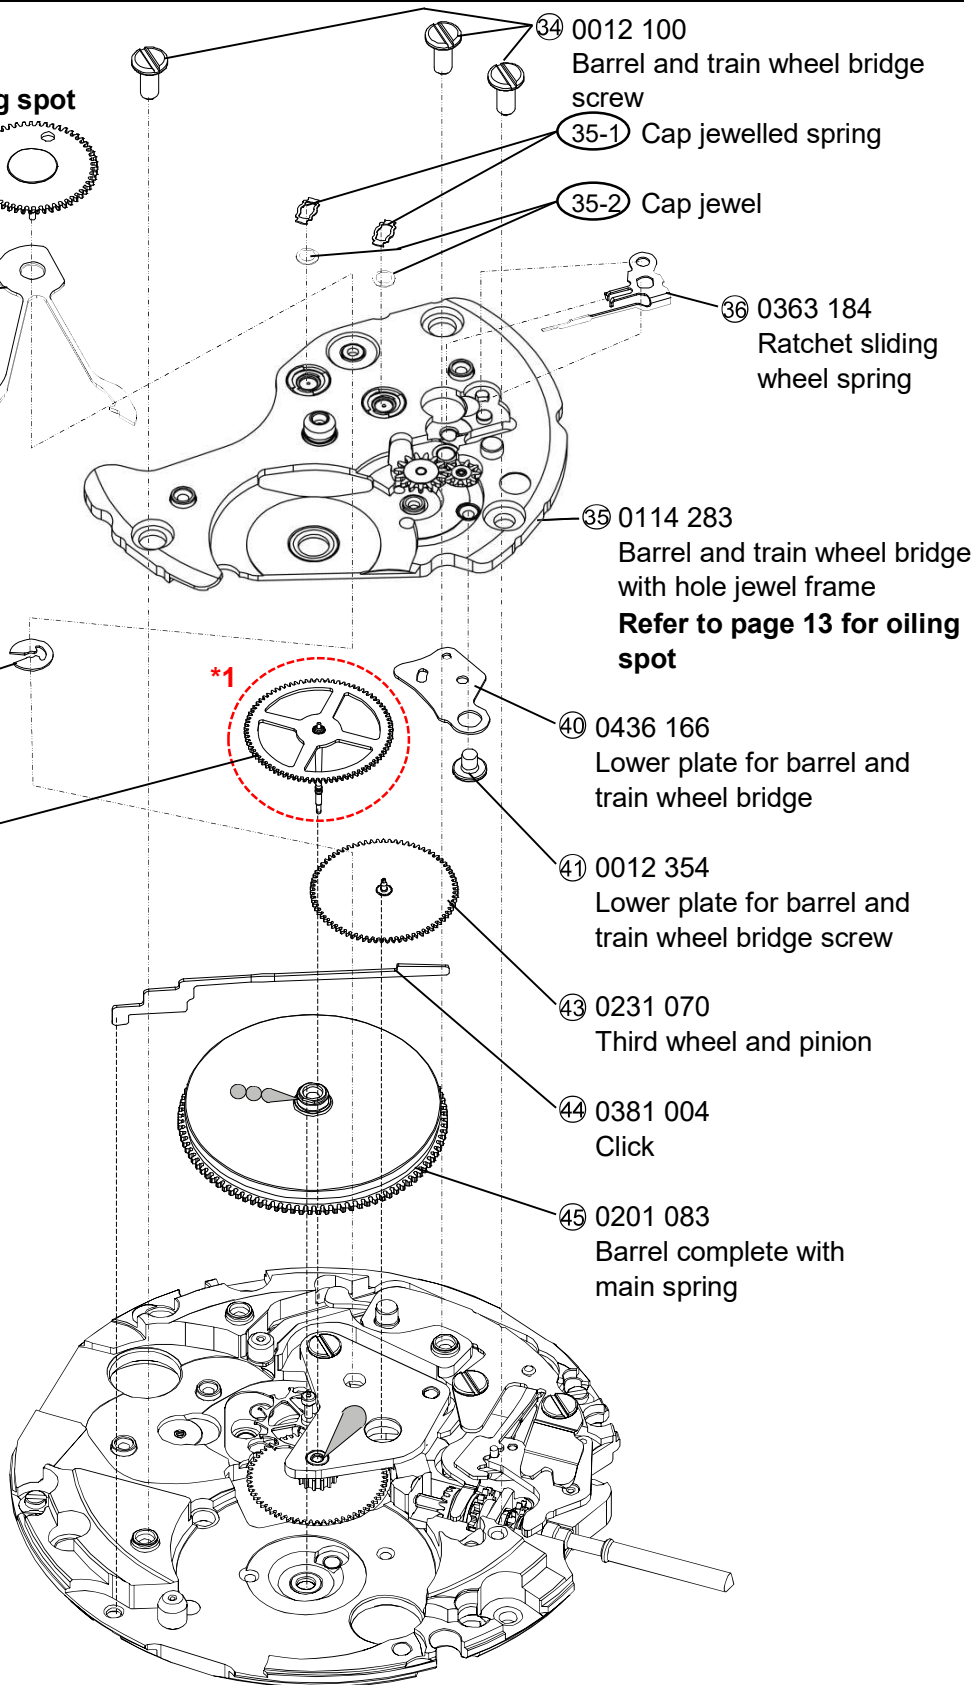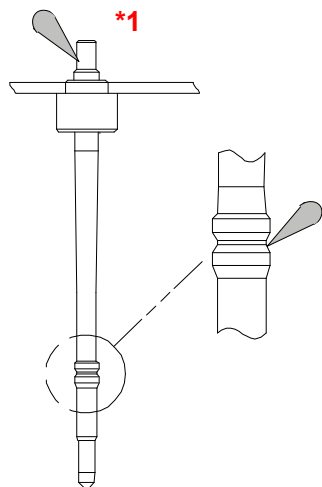

Disassembling procedures Figs.

① → 58

Reassembling procedures Figs.

58 → ①

Type of oil



Moebius 9010



A9a (S-4)



A9a (S-6)


Oil quantity mark



Normal quantity



Sufficient quantity

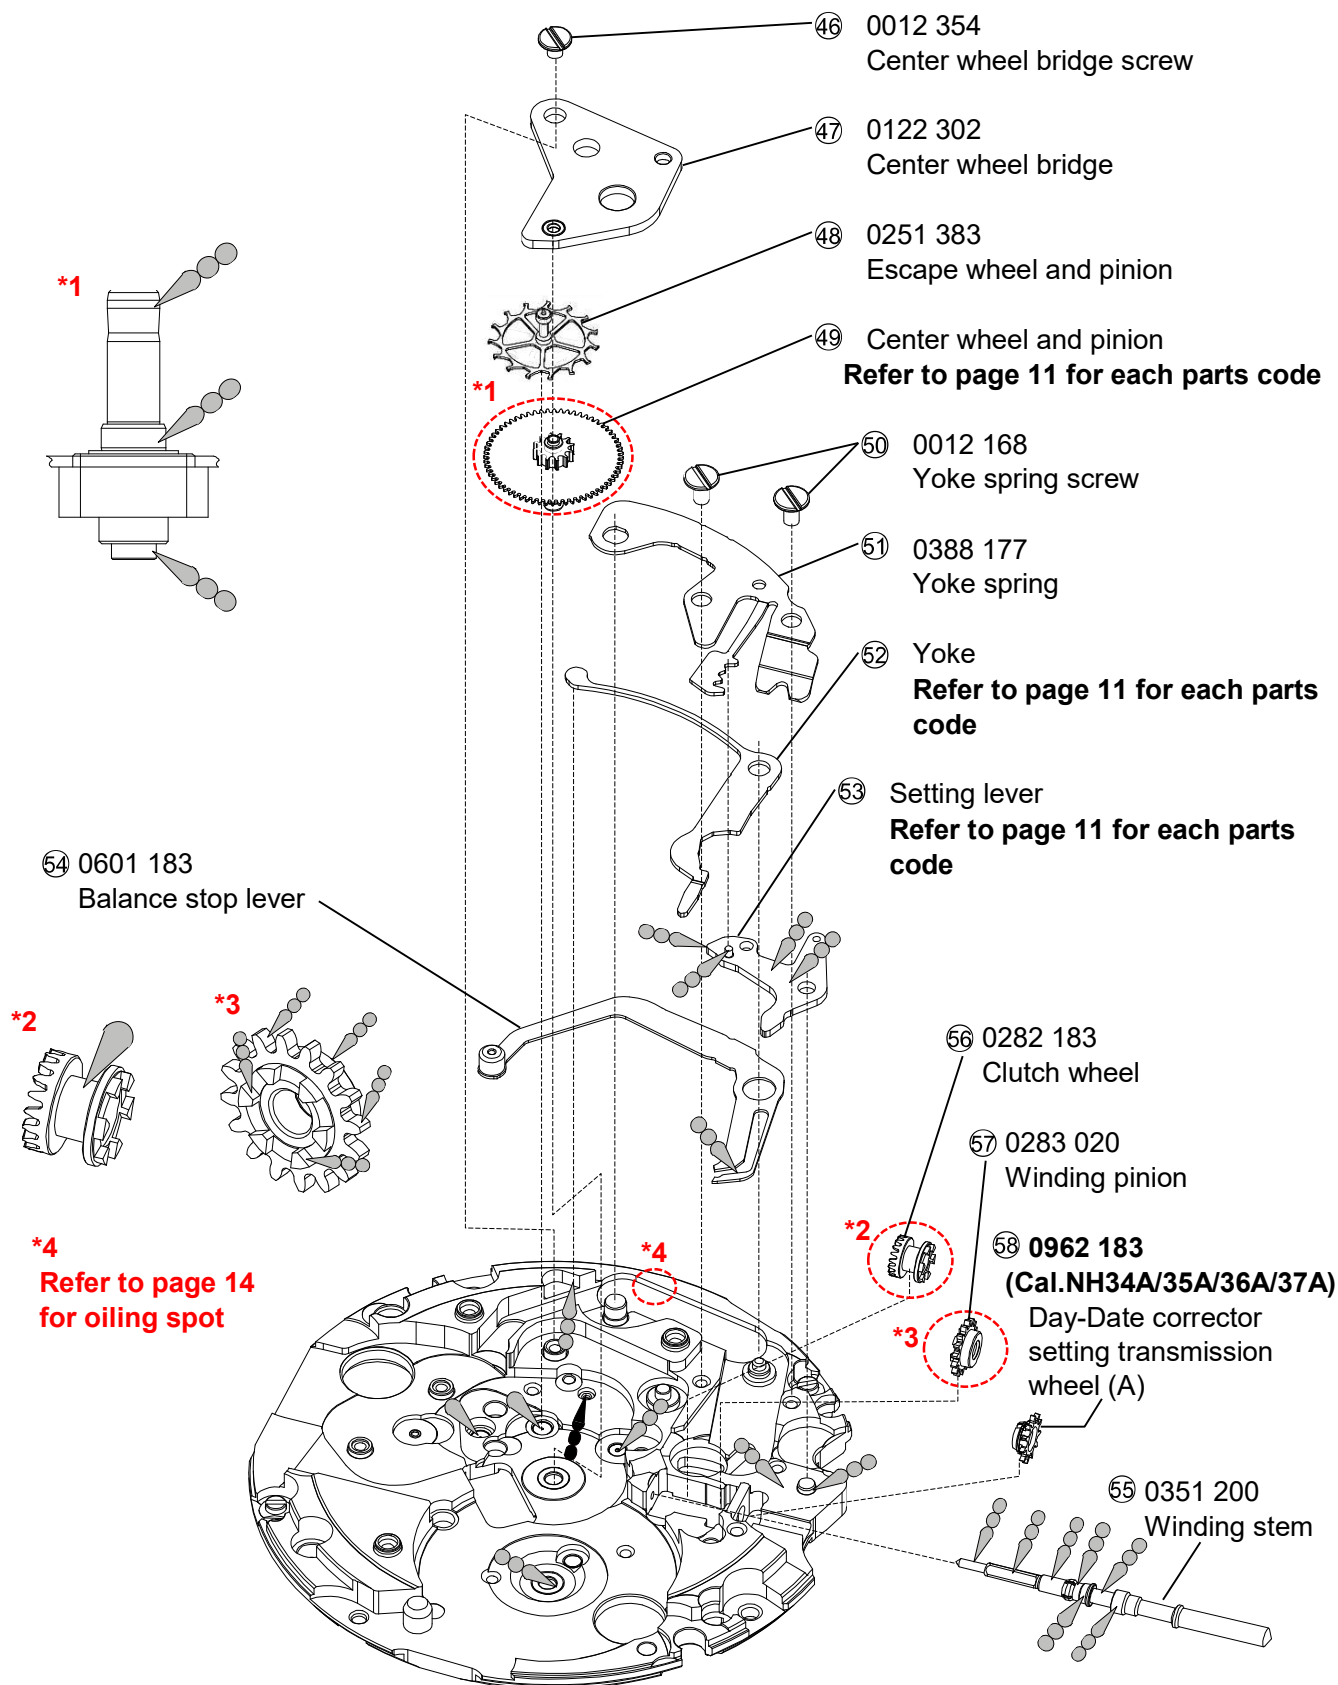

② Day star with dial disk (Cal.NH36A only : Page 5)

Parts code	Position of crown	Position of day frame	Color of letters	Color of background	Language
0160 495	3H	3H	MON~FRI : Black SAT : Blue SUN : Red	White	English & Spanish

Date dial

Page	No	Cal.	Parts code	Position of crown	Position of day frame	Color of letters	Color of background
3	⑤	NH34	0878 208	3H	3H	Black	White
		NH35					
5	⑥	NH37	0878 206	3H	3H	Black	White
		NH36					

⑪ Cannon pinion (Page 6)

Cal.	Parts code	Cal.	Parts code
NH35	0225 425	NH37	0225 426
NH36		NH38	

⑦ Cannon pinion (Page 7)

Cal.	Parts code	Cal.	Parts code
NH38	0225 425	NH39	0225 426
NH39		NH40	

⑫ Oscillating weight with ball bearing (Page 8)

Cal.	Parts code	Marking	Cal.	Parts code	Marking
NH34	1509 257	Japan mark	NH37	0509 470	Japan mark
	1509 258	Malaysia mark		0509 471	Malaysia mark
NH35	0509 467	Japan mark	NH38	0509 476	Japan mark
	0509 468	Malaysia mark		0509 477	Malaysia mark
NH36	0509 463	Japan mark	NH39	0509 473	Japan mark
	0509 464	Malaysia mark		0509 474	Malaysia mark

③① Balance complete with stud (Page 8)

Cal.	Parts code	Cal.	Parts code
NH34	0310 183	NH38	0310 184
NH35		NH39	
NH36			
NH37			
NH38			

④② Fourth wheel and pinion (Page 9)

Cal.	Parts code	Cal.	Parts code
NH35	0144 184	NH34	0144 185
NH36		NH37	
NH38		NH39	
NH39			

④⑨ Center wheel and pinion (Page 10)

Cal.	Parts code	Cal.	Parts code
NH35	0221 183	NH34	0221 185
NH36		NH37	
NH38		NH39	
NH39			






⑤② Yoke (Page 10)

Cal.	Parts code	Cal.	Parts code
NH34	0384 183	NH38	0384 184
NH35		NH39	
NH36			
NH37			
NH38			





⑤③ Setting lever (Page 10)



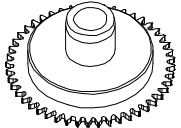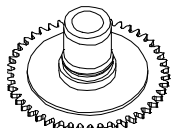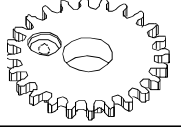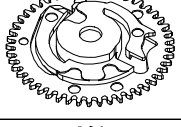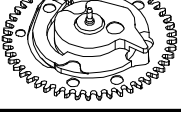


Cal.	Parts code	Cal.	Parts code
NH34	0383 185	NH38	0383 186
NH35		NH39	
NH36			
NH37			
NH38			

■ Remarks : Different parts for each CAL.

Page	No	Cal.					Parts code	Parts name	Parts form
		NH35	NH36	NH37	NH38	NH39			
6	⑭	○	-	-	-	-	0273 182	Hour wheel 0273 182 & 0273 184 (Height difference)	
		-	○	-	-	-	0273 183		
		-	-	○	-	-	0273 184		
7	③	-	-	-	○	-	0273 183	Hour wheel 0273 183 & 0273 185 (Height difference)	
		-	-	-	-	○	0273 185		
6	⑯	○	○	-	-	-	0817 300	Intermediate date driving wheel and pinion	
		-	-	○	-	○		Intermediate 24hour wheel and pinion	
6	⑰	○	○	-	-	-	0802 183	Date indicator driving wheel	
		-	-	○	-	-	0157 182	24hour wheel	



■ List of screw

Page	No	Parts code	Parts name	Parts form	Page	No	Parts code	Parts name	Parts form
3	②	0012 354	Date indicator maintaining plate screw (x4)		4	⑧	0012 485	Guard for day-date corrector setting transmission wheel screw (x2)	
5	④				6	⑨			
7	①		Hour wheel guard screw (x4)		8	㉓	0012 919	Ratchet wheel screw	
8	㉔		Automatic train bridge screw (x2)		8	㉔	0012 100	Balance bridge screw	
	㉕		Pallet bridge screw (x2)						
9	④①		Lower plate for barrel and train wheel bridge screw		9	㉔		Barrel and train wheel bridge screw (x3)	
10	④⑥	Center wheel bridge screw							
10	⑤①	0012 168	Yoke spring screw (x2)						




Type of oil	
 Moebius 9010	 A9a (S-6)
 A9a (S-4)	
Oil quantity mark	
 Normal quantity	 Sufficient quantity

1.Oiling spot

③⑤ Barrel and train wheel bridge with hole jewel frame

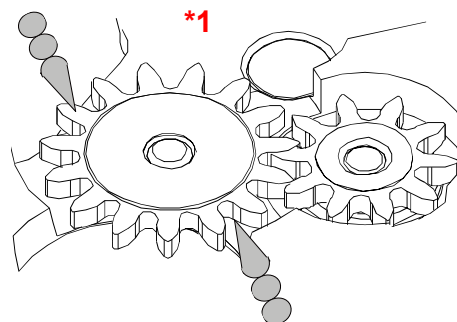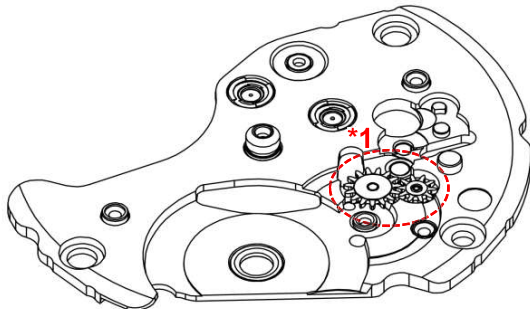


Barrel and train wheel bridge with hole jewel frame (back side)

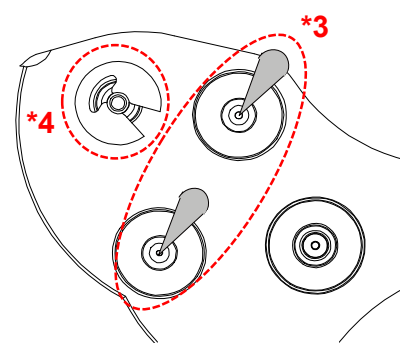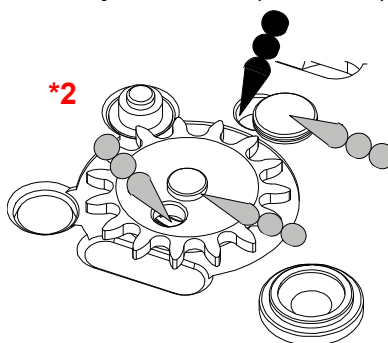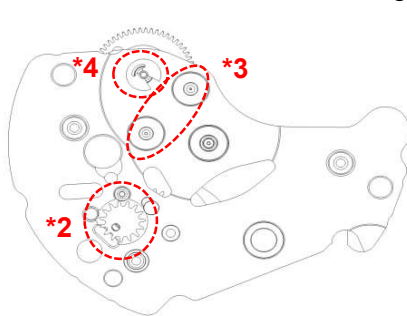

Note

***2** After oiling, set lower plate for barrel and train wheel bridge & screw.

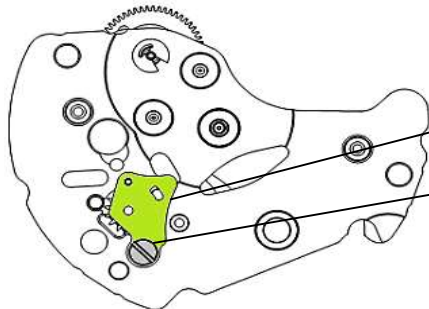


④① Lower plate for barrel and train wheel bridge

④① Lower plate for barrel and train wheel bridge screw


***4** After oiling, set first reduction wheel & pawl lever & reduction wheel holder.

③⑨ First reduction wheel

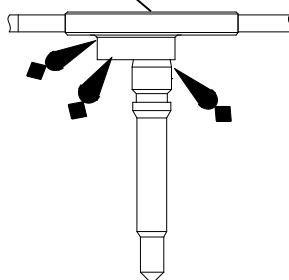


③⑨ First reduction wheel

③⑧ Pawl lever

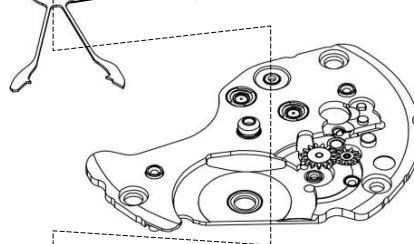


③⑦ Reduction wheel holder

54 Balance stop lever

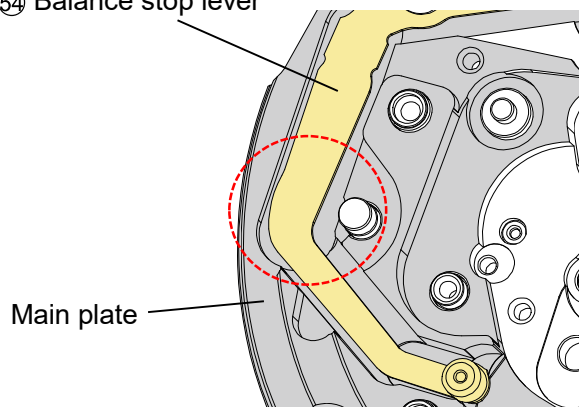

Main plate


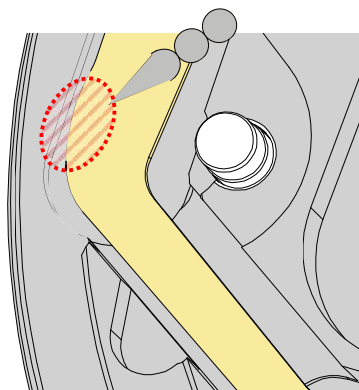


Contact part of main plate and balance stop lever


2. Setting position of oscillating weight

· Before assembling oscillating weight

Match the center of the oscillating weight and winding stem. Set the hole of first reduction wheel gear on the imaginary line toward the balance bridge guide pin.

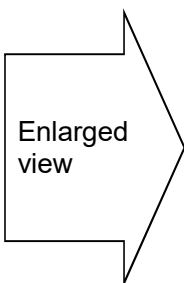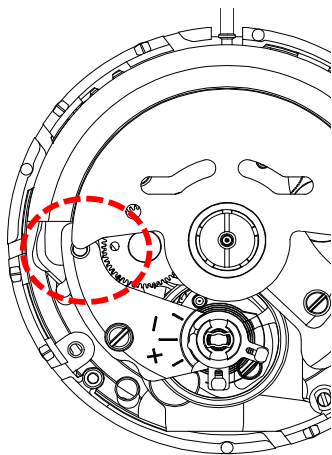

Enlarged view

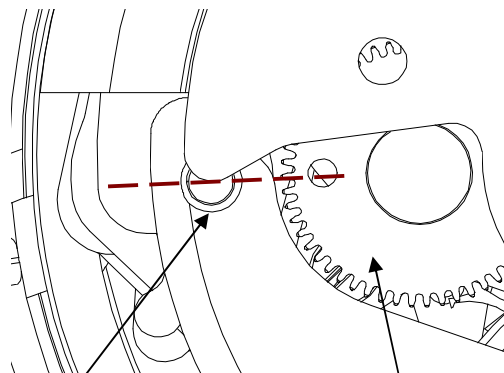


Balance bridge guide pin

First reduction wheel gear

3. To remove the winding stem


- 1) Set the winding stem to normal position
- 2) Pull out the winding stem, while pushing "A"

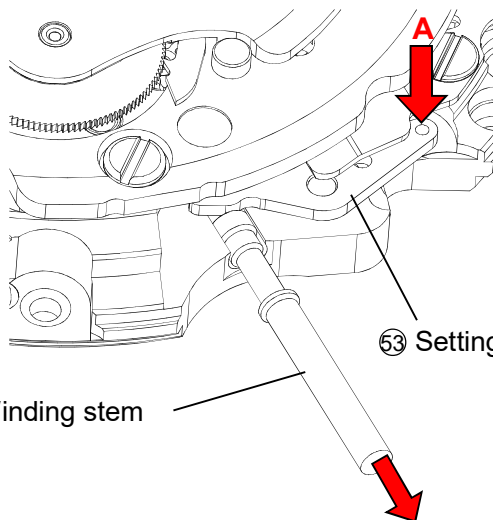


53 Setting lever

55 Winding stem

4. Disassembling / assembling of the First reduction wheel

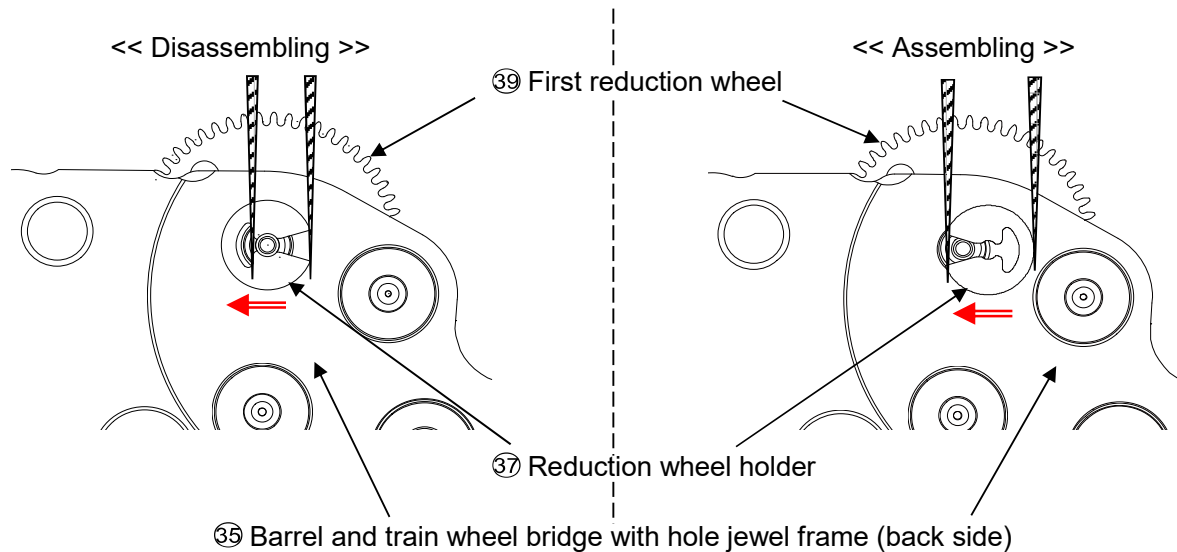


5. Disassembling / assembling of the Ratchet sliding wheel spring

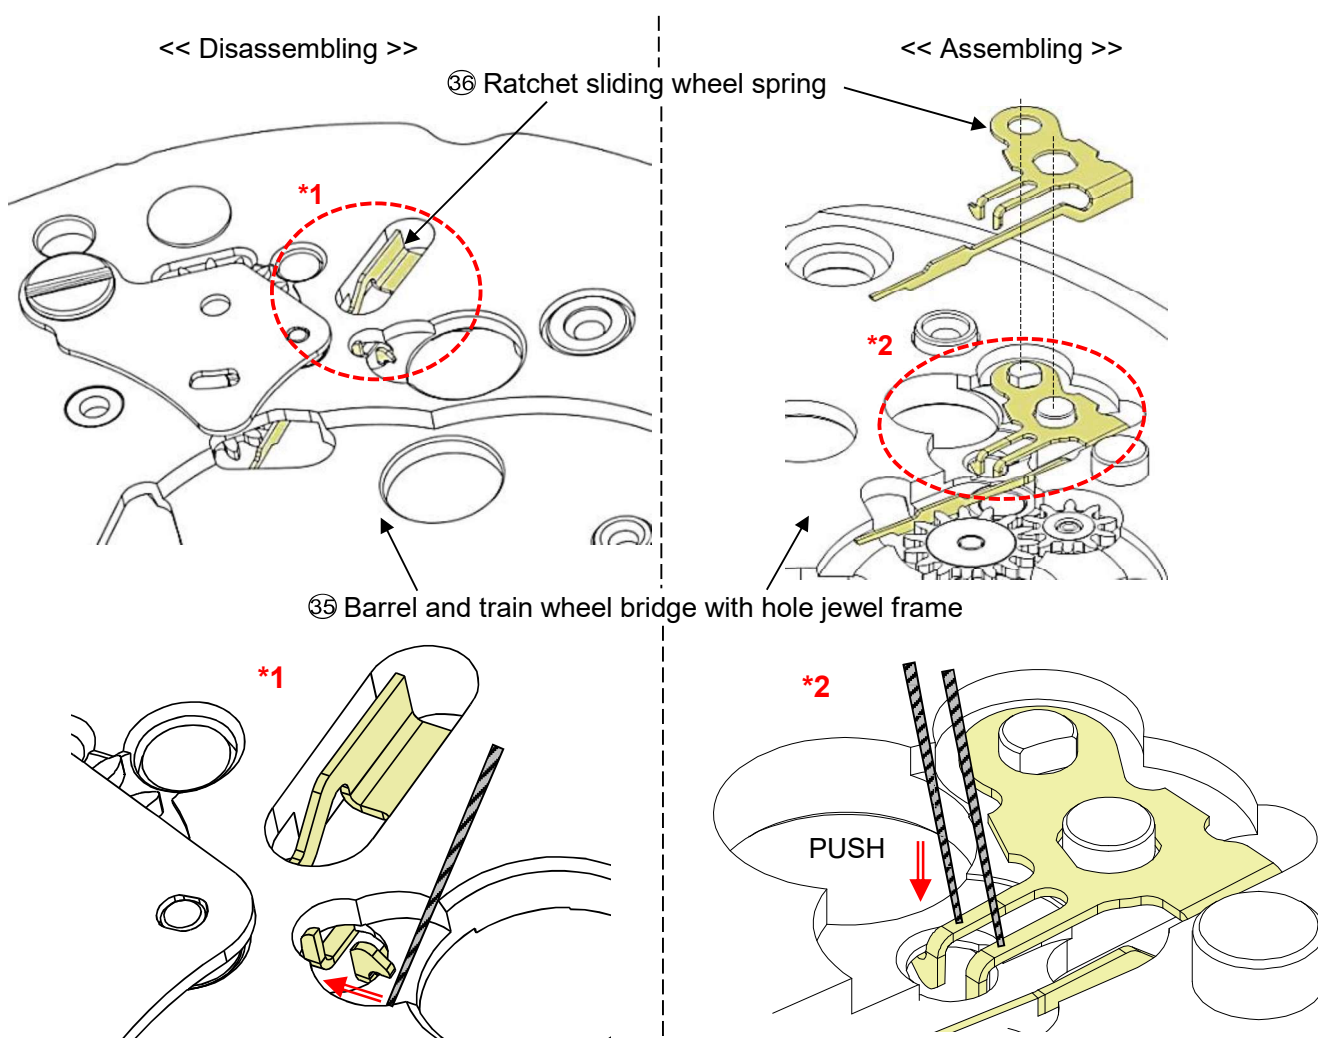

Remove the hook of the ratchet sliding wheel spring from barrel and train wheel bridge with hole jewel frame.


The hooks of ratchet sliding wheel spring are hung up on barrel and train wheel bridge with hole jewel frame.

6.Accuracy adjustment

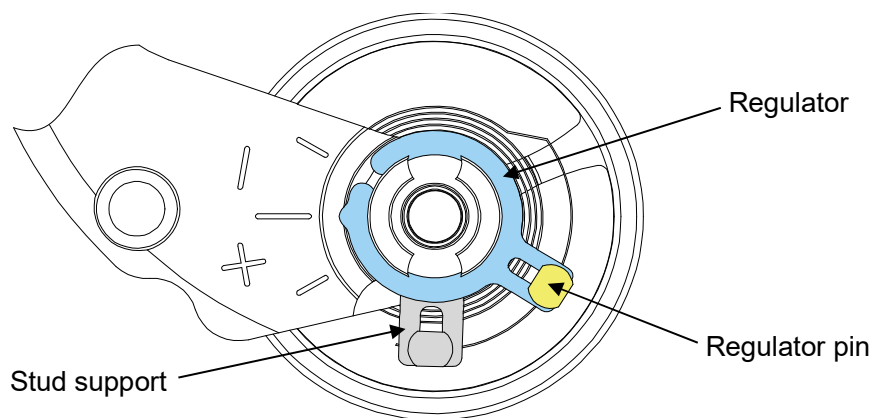


Note:


▪Regulator (Time adjustment)

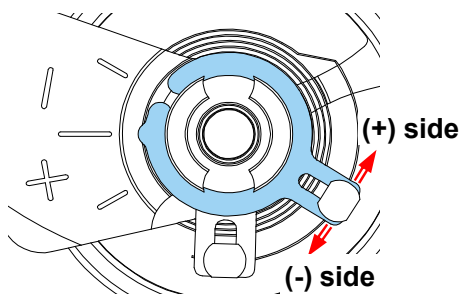


▪Stud support (Beat error adjustment)

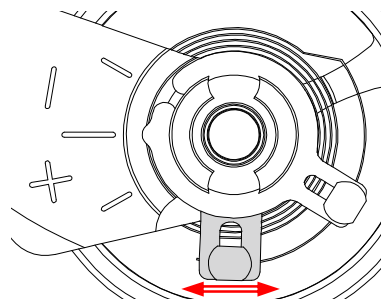


▪Regulator pin (Gap adjustment of balance spring and regulator pin)

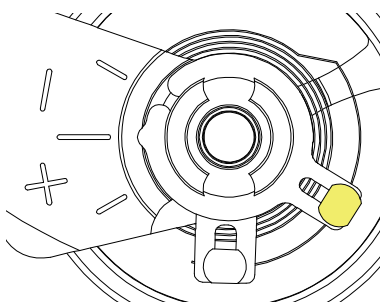

Anticlockwise rotation

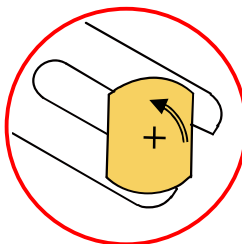

No clockwise rotation

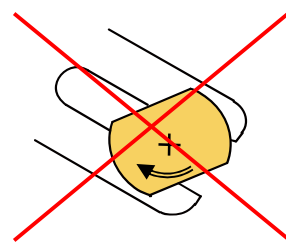


7.To wind up the mainspring


<<Movement>>

- Manual winding (Fully wound up by turning the crown minimum 55 times)
- Screwdriver winding (Fully wound up by turning the ratchet wheel screw 8 times)

[Manual winding]

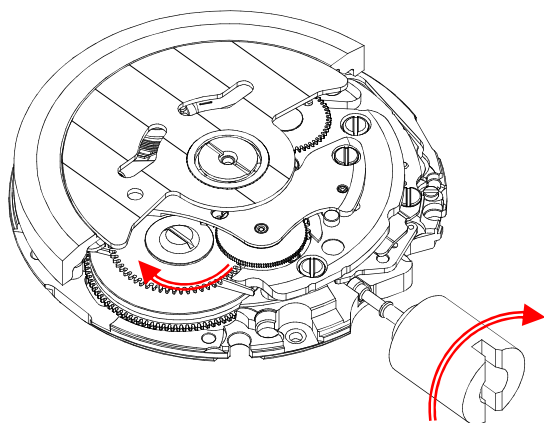

[Screwdriver winding]

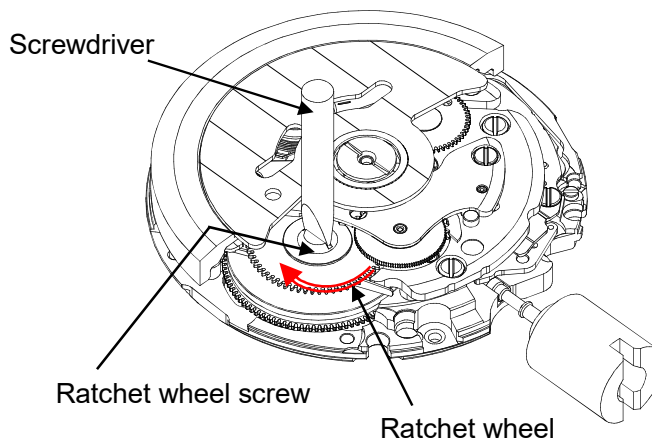

8.How to install hands

Place the movement directly on a flat metal plate or something similar to install the hands.


We recommend the use of movement holder to install hands.

For hands attachment, please use a special equipment.

When the movement receives a strong shock, it may be damaged.

***Install the 24hour hand (Cal.NH37A/39A)**

Pull out the crown to the second click position and rotation it clockwise to install 24hour hand.

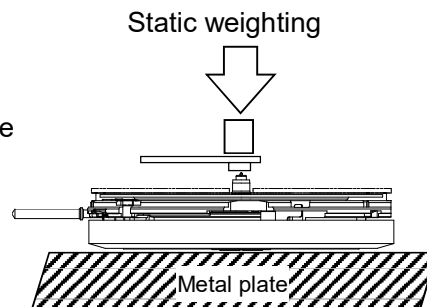

9.Accuracy measurement condition

Static Accuracy : - 20 ~ + 40 seconds per day


Measurement Conditions





- 1) Measurement should be done within 10 ~ 60 minutes after fully wound up.
- 2) Lift angle : 53 deg
- 3) Measurement position : (1) Dial up (2) 9 o'clock up (3) 6 o'clock up
- 4) Minimum measurement Time : 20 seconds
- 5) Stabilizing Time :

Leave the watch for at least 20 seconds to stabilize after you change its measurement position.

10.About the handling (Cal.NH38A/39A)

- Part is processed as a mirror surface. It is damaged when touching with tweezers. Please be careful about the handling.

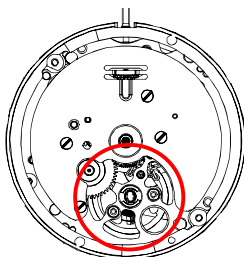

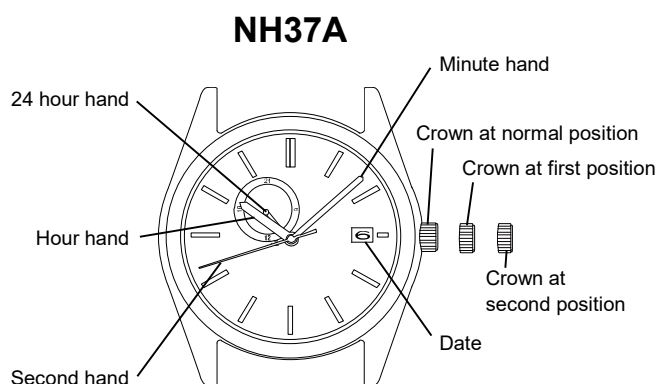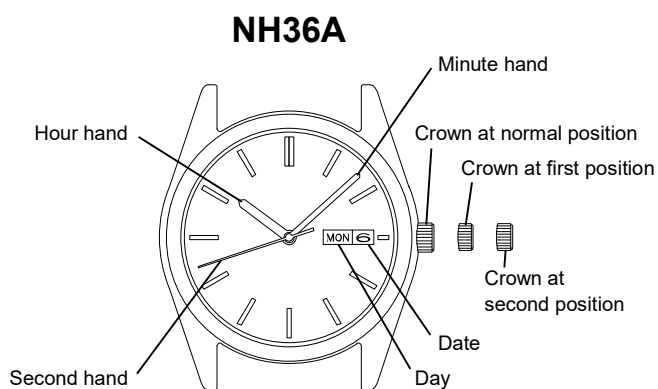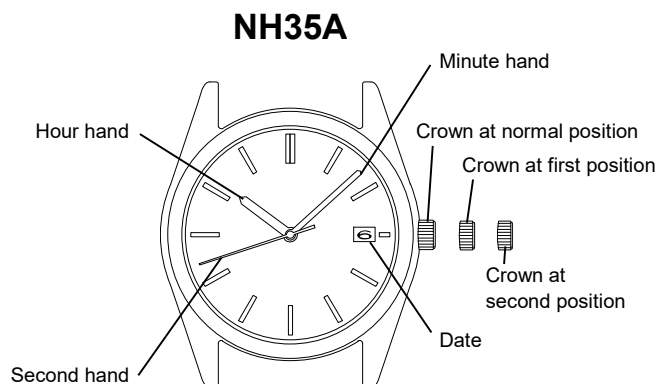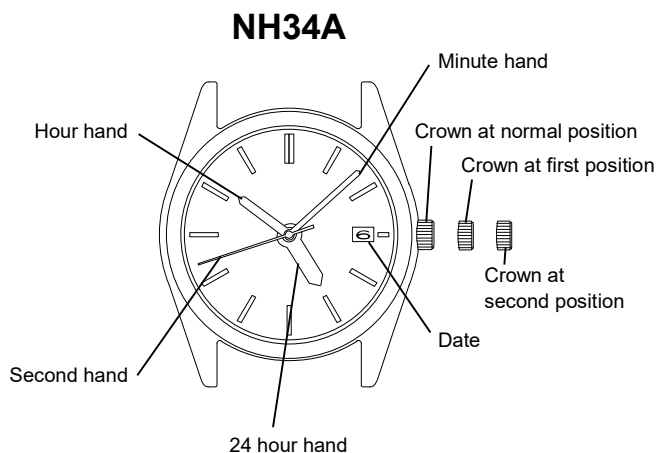

1.How to set the time



- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly)
- 3) Push the crown back into the normal position.

2.How to set the Date & Time difference

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Turn the crown to right for day setting. (Cal.NH36A only)
 *Do not set the date between 9:00 P.M. and 4:00 A.M. as this will cause a malfunction.
- 4) Turn the crown to right for 24 hour hand setting. (Cal.NH34A only)
- 5) Push the crown back into the normal position.

3.To wind up the mainspring

- a) Manual winding (Rotate the crown clockwise at normal position)
 Fully wound up by turning the crown minimum 55 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.
 Full wind up conditions (Reference information)
 - Rotary speed : 30 rpm
 - Operating time : 60 minutes

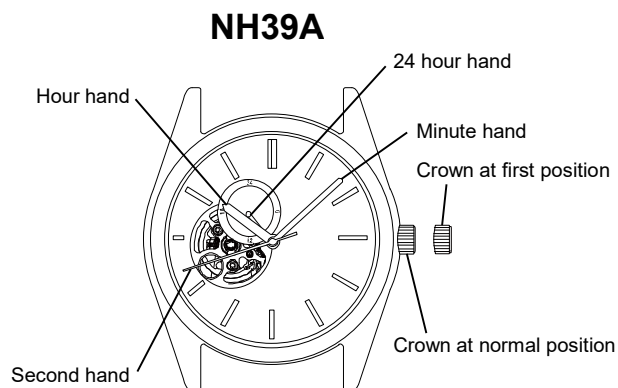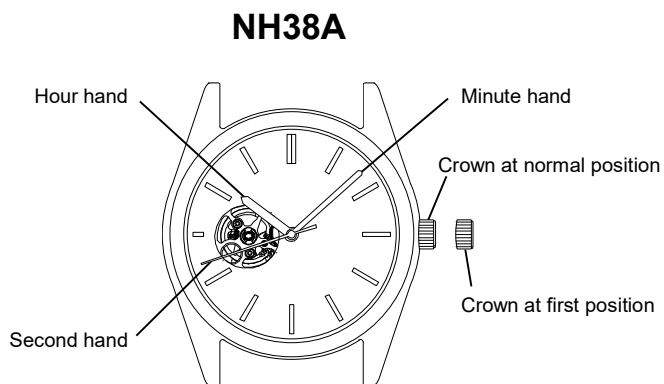

1.How to set the time

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly)
- 3) Push the crown back into the normal position.

2.To wind up the mainspring

- a) Manual winding (Rotate the crown clockwise at normal position)
Fully wound up by turning the crown minimum 55 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.
Full wind up conditions (Reference information)
 - Rotary speed : 30 rpm
 - Operating time : 60 minutes